

IMPORTANT RECALL NOTICE!

Dear Big Lots/Oakmont LP Fire Table Consumer,

We are voluntarily issuing a recall to repair all Oakmont LP Fire Tables in cooperation with the U.S. Consumer Product Safety Commission ("CPSC").



AFFECTED PRODUCTS:

Oakmont LP Fire Tables are manufactured by Sunjoy Industries Co., Ltd. and were sold at Big Lots stores and on biglots.com from January 2020 through June 2020. The Oakmont LP Fire Tables are outdoor fire pit tables, powered by propane, with push button ignition and an adjustable flame, sold under the Wilson & Fisher Brand. Oakmont LP Fire Tables are identified by Item #A302001800 and SKU #810454612.

WHAT IS THE ISSUE: The composite rubber supply hoses may come in contact with or in close proximity to the firebox, which may result in the hose melting, leaking or igniting.

WHAT WILL SUNJOY DO FOR AFFECTED CONSUMERS: Please immediately stop using the affected product and follow the below instructions to obtain a repair kit. Call 866-578-0101 for customer support.

INSTRUCTIONS FOR AFFECTED CONSUMERS:

- To register your affected product, visit <http://oakmont.sunjoygroup.com/service> and fill out the requested information under the "Registering your product" section (name, address and phone number);
- Take a picture of the item number (A302001800) which is located on the CSA label on the left side of the control box (pictured below) and upload it to the registration website under the "Attachment" section;



- Cut the hose leading to the burner of your fire pit by following the following steps:

IMPORTANT RECALL NOTICE!

Getting Started: Items you will need

1. Phillips-head
screwdriver



2. Box or container
to hold the lava rock
while you complete
the process



3. Soft surface area
such as a blanket, at
least 40" square (to
protect your tabletop
when it's turned
upside down)

Step 1:

Take off the door panel, the lid, and the mesh screen. **Following safety guidelines outlined in your original instructions**, disconnect and remove your propane tank. Completely remove all the lava rock and set aside. (Make sure no lava rock or debris remains)



Step 2:

Place fire pit upside down on the prepared soft surface. Using the Phillips-head screwdriver, unscrew the 4 bolts on the corners of the fire bowl.



Set the old disassembled burner
aside

- Looking at the bottom of the burner unit, ensure that the back hose underneath the fire bowl is drained and empty. Then use a pair of scissors to cut the hose of your fire pit.
- Take a picture of the cut hose, and upload this photo, as well, to the registration website under the "Attachment" section;
- Click the submit button once all of the required information is filled out and your pictures are uploaded;
- Once you have submitted your contact information and uploaded the photographs you will see a message that your registration is complete. You will be sent a repair kit in the mail with full instructions for how to replace the burner in your firepit.

We apologize for the inconvenience.

IMPORTANT RECALL NOTICE!

If you have any questions throughout this process please call 866-578-0101, or visit:
<http://oakmont.sunjoygroup.com/service>