

OAKMONT BURNER KIT – REPLACEMENT INSTRUCTIONS

Item# A302001800 SKU# 810454612 Oakmont LP Fire Table

Getting Started: Items you will need



2. Box or container to hold the lava rock while you complete the process



3. Soft surface area such as a blanket, at least 40" square (to protect your tabletop when it's turned upside down)

Step 1:

Take off the door panel, the lid, and the mesh screen. *Following safety guidelines outlined in your original instructions*, disconnect and remove your propane tank. Completely remove all the lava rock and set aside. (Make sure no lava rock or debris remains)



Step 2:

Place fire pit upside down on the prepared soft surface. Using the Phillips-head screwdriver, unscrew the 4 bolts on the corners of the fire bowl.





Set the old disassembled burner aside, and get the new burner assembly ready to install

Step 3:

Carefully orient the new burner assembly into place on the underside of your tabletop, *making sure the control valve faces the door*. Using the Phillips-head screwdriver and the 4 bolts, attach the new burner assembly. Flip your firepit back over, refill your lava rock, and prepare your firepit table for normal operation. *Always follow the original safety instructions to operate the firepit.*





